



IMPORTANT INFORMATIONS!

INFORMATION SECURITY THERMOSTAT

The security thermostat is set on

Incubators 39°C

Parrot home 38°C

Reptile incubators 35°C

by the manufacturer!

Please read for this purpose page 14 of our operating manual!

INFORMATION FILTERFLEECE

Please change the filterfleece regularly after every hatching season!

EMPTYING THE WATERTANK

Please remove all loose parts (metal trays, capillary-thermometer etc.) out of the breeding chamber!

Then place a bucket below the water fill in plug and loose the hexagon screw which is under the water fill in plug by using a screw-wrench of size 17!

To pour out the water completely tilt the unit forward until no more water comes out of the tank.

Attention! Drain the water only if it's in cold state!

PLACEMENT OF INCUBATOR:

Location: cool room, max. 18° - 20°C, without noise disturbance and vibrations by train or road traffic!

Installation mode: The incubator has to stand straight and with 10cm distance on each side to walls or other objects!

Do not use the top cover of the incubator as additional storage space!

Do not place one incubator on another!